

Installation Guide

Model Name	Model No.
Video Intercom System	VL-SA71SX
Monitor Station (17.8 cm)	VL-MA71SX
Door Station	VL-VA502SX

- This guide is for use with the above models



Door Station



Monitor Station

- The Installation Guide can also be accessed from the following site:
<https://security.in.panasonic.com/products/vl-sa71>
- Door station is described as "doorphone" and monitor station is described as "monitor" in this guide.
- In this guide, the suffix of each model number (e.g., the "SX" in "VL-SA71SX") is omitted unless necessary.

Note to the Installer

- Before attempting to connect or operate this product, please read the label on the rear of the doorphone and the monitor.
- Please read this guide carefully, and install the product safely and correctly by following the instructions. Carefully read the information found in the section titled "For your Safety" in particular.
- Only use attachments/accessories specified by the manufacturer.
- The installation shall be carried out in accordance with all applicable installation rules.
- To the maximum extent permitted by law, Panasonic assumes no responsibility for injuries or property damage resulting from failures arising out of improper installation or operation inconsistent with this document.
- After installation, make sure to leave this guide with the customer.
- For any assistance call our Customer care no. : 080-6984-1373 or write to us at
Email : helpline@in.panasonic.com

For your Safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.



WARNING

Preventing fire, electric shock and short circuits

- Leave installation work to the dealer. Installation work requires technique and experiences. Failure to observe this may cause fire, electric shock, injury, or damage to the product. Consult the dealer.
- Electrical connection work should be performed by certified personnel only. Certification is required for performing electrical connection work. Consult your dealer.
- Do not attempt to disassemble or modify this product. Contact an authorised service center for repairs.
- Never install wiring during a lightning storm.
- Do not connect non-specified devices.
- Do not connect a power cable to a terminal that is not specified in this guide.
- When opening holes in walls for installation or wiring, or when securing the power cable, make sure you do not damage existing wiring and ductwork.
- Do not make any wiring connections when the power supply is turned on.

- Do not use the supplied power supply unit for outdoor installations (it is for indoor use only).
- Do not install the monitor in the following places:

–Places where the monitor may be splashed with water or chemicals.

–Places where there is a high concentration of dust, or high humidity.

Do not perform any actions (such as fabricating, twisting, stretching, bundling, forcibly bending, damaging, altering, exposing to heat sources, or placing heavy objects on the power cable) that may damage the power cable. Using the product with a damaged power cable may cause electric shock, short circuits, or fire. Contact an authorized service center for repairs.



CAUTION

Preventing electric shock

- If the wiring is underground, do not make any connections underground.
- If wiring is underground or in open area use a protection tube to prevent damage.
- Install the product securely adhering to the instructions in this guide to prevent it from falling off the wall.
- Avoid installing onto low-strength walls, such as gypsum board, ALC (autoclaved lightweight concrete), concrete block, or veneer (less than 18 mm thick) walls.

Supplied Accessories for Installation

For the door station			
 Screw x 4 (KA 4 mm x 25 mm)	 Screw x 1 (PM 2 mm x 6 mm)	 Silicone Cap x 4 (M6 x 30mm)	 Allen key x 1
 Screw x 1 (KM 3 mm x 7 mm)			

For the monitor			Power supply unit
 Mounting bracket x 1	 Silicone Cap x 2 (M6 x 30mm)	 • 2-pin cable x 1 4-pin cable x 2	 Power supply unit x 1 (DC 14.5V 1A)
	 Screw x 2 (KA 4 mm x 25 mm)		

Important:

- You will need the following additional items to install and configure the doorphone and the monitor.
- Wires (for door lock and other connections) prepare wire of the appropriate specification as per - (→ “wire type and length” (Page no. 7))

Note:

- The illustrations in the supplied manual(s) may vary slightly from the actual product.

Precautions for Installation

To avoid malfunction or communication disturbances, do not install the door station or the monitor in the following locations:

- Places where vibration or any other kind of impact occurs.
- Places where echoing is frequent.
- Places near a high concentration of dust, hydrogen sulphide, ammonia, sulphur, or noxious fumes.

For the doorphone

- If a strong light is shining on the doorphone, the visitor's face may not be distinguishable. Do not place the doorphone in the following locations:
 - Where most of the background is the sky.
 - Where the background is a white wall, and direct sunlight will reflect off it.
 - Where direct sunlight will shine on the doorphone.
- Do not place the doorphone in locations where echoing occurs, as this will cause the doorphone to beep frequently.
- Make sure the rear of the doorphone is not subject to water.
- Depending on the installation location, condensation may form on the doorphone's lens cover. This may cause images to become obscured. Condensation will dissipate as the temperature rises.


For the monitor

- Leave at least 20 cm of space above, below, and to the left and right sides of the monitor.
Do not install on a wall that is deeply recessed.
- Do not install the monitor inside a wall.
- Be sure to install the monitor more than 5 m away from the doorphone.
- In areas surrounded by a high electrical field, disturbance may occur in the monitor's image or sound.

Wiring Schematic Diagram


Set up correctly according to the following wiring schematic diagram and "Wire type and length".
(Page no. 7)

The wiring diagram for one outdoor unit with one monitor.

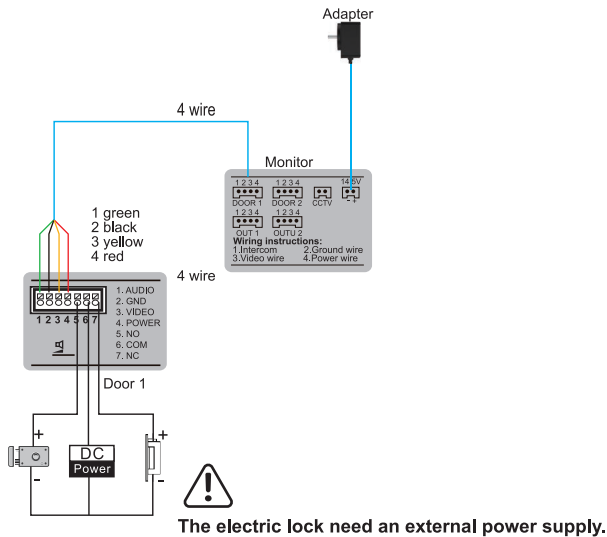

Note: For outdoor unit connected to monitor terminal "DOOR 1", it will be shown as door 1 on monitor.

The wiring diagram for two outdoor units with one monitor.

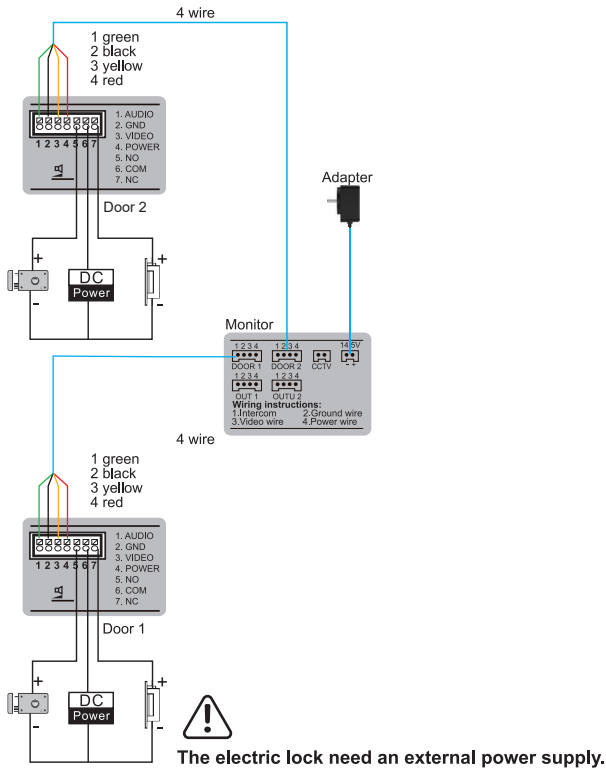

Note: For outdoor unit connected to monitor terminal "DOOR 1", it will be shown as door 1 on monitor.
For outdoor unit connected to monitor terminal "DOOR 2", it will be shown as door 2 on monitor.

Power Supply

This video door phone system can be expandable up to 2 door stations work with 1 monitor and 1 security camera. The outdoor station does not need an additional power supply. Security camera require separate power supplies.


Wire Type and Length

Wiring run	Wire type		
	Specification		Length (Max.)
	Size	Type	
Door station – Monitor	0.75 mm ²	RVV4	50 m
	0.5 mm ²	RVV4	30 m
	0.3 mm ²	RVV4	10 m
Door station – Electric lock	1.0 mm ²	RVV2	1.5 m
Monitor – Security camera (For option)	0.5 mm ² - 1.2 mm ² (RVV2)		10 m

- ① Make sure that the total wiring length from the door station to the monitor is within about 50 m.
- ② When the distance between door station and monitor is within 10 m, please use RVV4 x 0.3 mm² cable, if you want to lengthen the cable up to 30 m, please use RVV4 x 0.5 mm² cable, if you want to lengthen the cable up to 50 m, please use RVV4 x 0.75 mm² cable.

Doorphone Installation Position

Installation position of the doorphone and camera range
Views when the camera is facing forwards at 0° (default).
● Example: Installation height is 1450 mm (standard position).

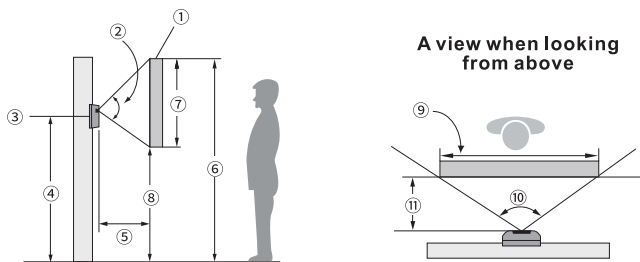

- (Units:mm)
- ① Image range ② Approx. 66° ③ Centre of doorphone ④ Approx.1450 ⑤ Approx. 500
- ⑥ Approx.1810 ⑦ Approx. 840 ⑧ Approx. 970 ⑨ Image range: Approx.1730 ⑩ Approx.90°
- ⑪ Approx. 500

Note:

The measurements and angles are for reference purposes and may vary depending on the environment.

Installing the Doorphone

Important:


–Never use the following types of wiring.
Consult a qualified Panasonic technician/dealer.



- See "Wire type and length" (Page 6) for information about wiring materials.

1 Remove the bracket for outdoor unit.


- ① Loosen the mounting screw.

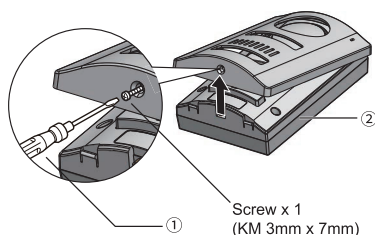

- ① ⊖ Screwdriver
- ② Bracket for outdoor unit.


2 Attached the bracket (①) to the wall securely using the screws (②) (accessory).

- Install the bracket on a vertical flat wall.
- Before drilling, refer to "Precautions (Page no. 4) for installation" for installation location.

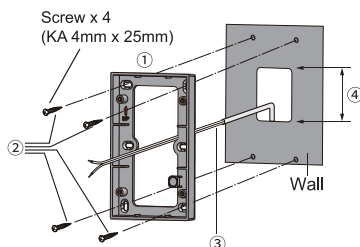


- ③ Connector (included as accessory)
- ④ 84 mm

Note: To prevent dew condensation, fill the hole on the wall for wiring as much as possible.

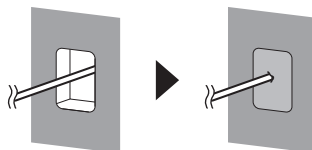


3 Connect the wire, then mount the doorphone to the bracket of outdoor unit.


- ① Use the push pin connector to insert wires ensure the wires are firm and secure.
- ② Wire (connecting to the monitor)

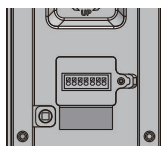


4 Camera Adjustment

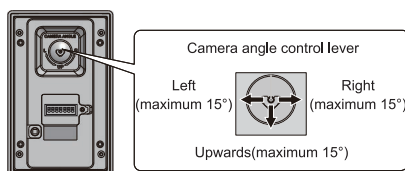

- 5 Mount the doorphone to the bracket and fasten it with the screw.

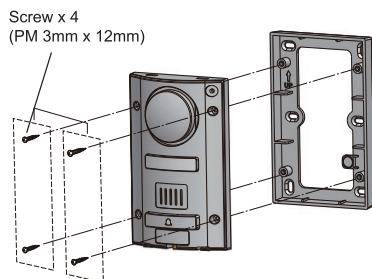


- 6 Attach the front panel and fix it with screw

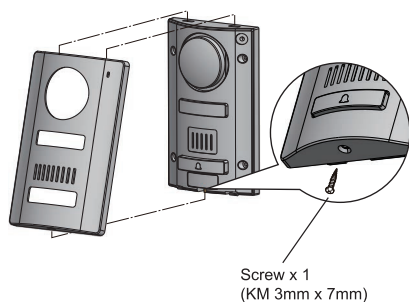


Monitor Installation Position

About the installation position of the monitor and mounting bracket

- Install at such a height that the customer can easily access the display.
- For the following reasons, leave at least 20 cm (①) of space above, below, and to the left and right sides of the monitor:
 - To prevent malfunction and sound distortion.

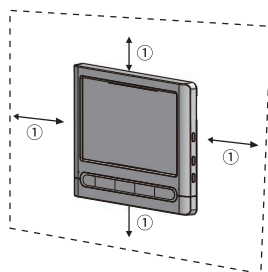

- After deciding where to install the monitor, attach the mounting bracket in the location shown below.

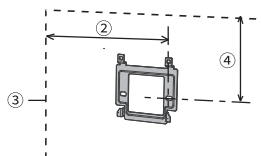


- ② 125 mm
- ③ Monitor installation position
- ④ 93 mm

Installing the Monitor


1 Attach the mounting bracket (2) to the wall

- Install the mounting bracket on a vertical flat wall (3).

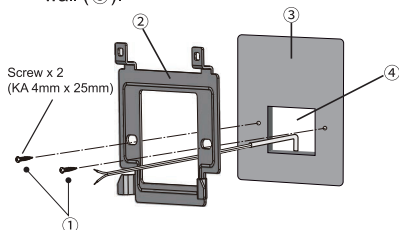

- ① Screws (accessory) ② Mounting bracket
③ Vertical flat wall ④ Hole in wall


2 Connecting VL-MA71SX monitor: Refer "Wiring Schematic Diagram" page no. 5/6.

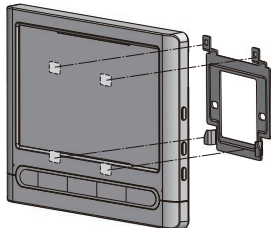


- Making wiring connections

Please connect the wiring connector to the correct terminal on the monitor.

3 Mount the monitor to the mounting bracket.

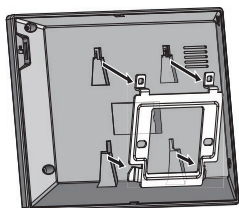

3.1 Please connect the power connector correctly according to the wiring diagram, and then connect the adapter to the socket, as below image.

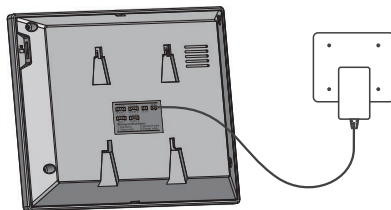

3.2 Line up the tab on the bracket with the groove on the monitor, and push the monitor down until it is secure.



Note :

- Make sure not to pinch the wires on the mounting bracket when installing.
- Do not forcibly attach monitor to the mounting bracket.

Panasonic Life Solutions India Pvt. Ltd.



Quick Guide



Installation Guide